


Correct use of alignment eye during engine installation

Gas Engines

Binder: C

Date: 02-2014

Page: 1(1)

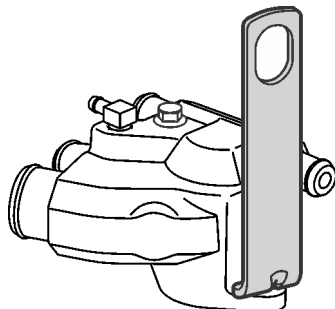


P0019647

WARNING!

Risk of injury from falling engine. Do not use the alignment eye attached to the thermostat housing to lift the engine. The alignment eye will not support the weight of the engine.

The alignment eye is only intended for use when maneuvering the engine during engine alignment.

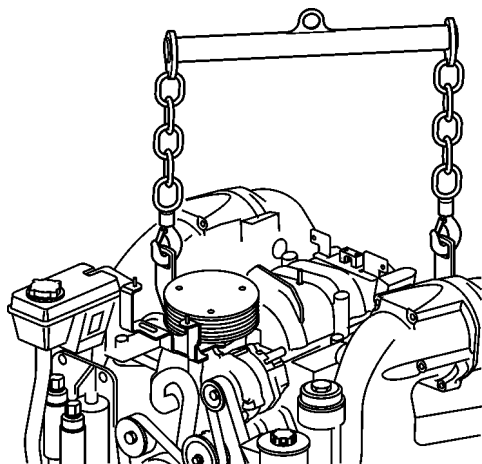

P0019646

Use the lifting eyes, on the corners of the engine, to lift the engine off of the pallet and in to the boat

Full details are included in the *Installation Manual* for the engine.